

Trouble Shooting:

The cursor moves too slow or too fast

Adjust the DPI button located on top of the mouse to find the right speed for you.

When you push the DPI button, if the word "DPI" flashes one time means slow speed;
two times means regular speed;
three times means fast speed;
four times means super fast speed.

The cursor doesn't move after some time without usage

The wireless version will sleep after a few minutes without usage to save battery power. Just click any button to wake it up.

There is no red light from the sensor located at the bottom as other optical mice

It is laser sensor instead of optical. There is no red light coming out from the laser sensor. Please don't check the light with your eyes directly. It may cause uncomfortable or even minor or moderate eye injury if you check with your eyes directly.

How to switch from one hand to the other hand?

Just push the switch under the mouse from R to L or from L to R.

RÖCKSTICK MOUSE
Ergonomic Laser Mouse



User's Guide



www.rockstickmouse.com

QUICK START:

1. Connect the mouse to the USB port of your computer.
2. Driver will be installed automatically.
3. Ready for use.



Power Switch Left/Right Switch



Ergo-Grip: Anchoring with your elbow or wrist for maximum ergonomic comfort.



Precise Grip: Anchoring with your wrist and fingertip for maximum precision.

