



# User's Manual

## Wireless Newtral 2 Mouse

### TABLE OF CONTENTS

- I: Content
- II: Specifications
- III: Instructions
- IV: FAQ&Support
- V: Warranty Information


### I:CONTENT

- a: A Wireless Newtral 2 Mouse (with medium flange)
- b: A small flange and a large flange separately
- c: A battery
- d: A User's Manual

### II:SPECIFICATIONS

- \*Interface: 2.4 GHz Wireless
- \*Range: 32.8' (10 m)
- \*Warranty: 2 years
- \*Resolution: 1000, 1500, 2000DPI
- \*Number of buttons: 6
- \*Compatibility:
- PC: Windows 8, Windows 7, Vista, 2000, XP
- Mac: Compatible
- Linux: Compatible

### \*Detailed Specifications

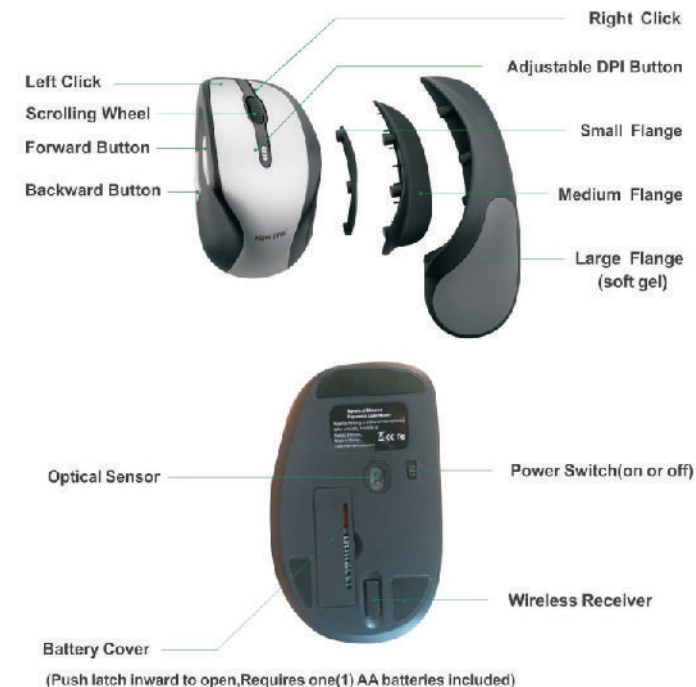

### III:INSTRUCTIONS

**One: The Newtral 2 mouse comes with Precision-Grip, Balance-Grip and Ergo-Grip for a fit and feel that's best for the way you work and play**



1. Precision-Grip: maximum precision for designing and gaming.



2. Balance-Grip: Balance between precision and comfort.



3. Ergo-Grip: Maximum comfort for office usage.



**Two: The DPI button located on the top of the mouse is adjustable.**



Press the DPI button and then move the mouse to find your preference.

Resolution: 1000-1500-2000

### IV:FAQ&SUPPORT

#### Q:Mouse not detected

A:Make sure the Newtral 2 Mouse is plugged into the correct port. Make sure to reboot your computer after you install the mouse driver.

#### Q:You have trouble with precise positioning

A:Using small flange for maximum precision.

#### Q:The cursor moves too slow or too fast

A:Adjust the DPI button located after the scrolling wheel to find the right speed for you.

### V:WARRANTY INFORMATION

**Q:The cursor doesn't move after some time without usage**  
A:The wireless version will sleep after a few minutes without usage to save battery power. Just click any button to wake it up.

#### Q:Cursor moving by itself

A:A reflective surface may cause cursor drift. Put the Newtral Mouse on a non-reflective mouse pad.

#### Q:There is no red light from the sensor located at the bottom as other optical mice

A: There is no red light coming out from the Newtral2 Ergonomic Optical Mouse. The new technology helps reduce light pollution.

#### Having another trouble with your Newtral 2 Mouse?

Please refer to our web [www.newtralmouse.com](http://www.newtralmouse.com) or contact MICROTOUCH Customer Service at [rockstickmouse@gmail.com](mailto:rockstickmouse@gmail.com).

### V:WARRANTY INFORMATION

Microtouch Technology Inc offers a two-year warranty on the Newtral 2 Mouse.

This Warranty is applicable to the initial purchaser only and is non-transferable.

We warrants that at the time of customer's receipt, the product will be in good working order and will be free from defects in material and workmanship.

This Warranty does not apply to normal wear and tear or damage caused by accident, neglect, misuse or improper installation or operation.

We will not be responsible for damage due to service, maintenance, modifications or tampering by anyone other than our authorized representative.

Within the Warranty period, we will either repair or replace the defective product.

This Warranty does not cover damage caused by a carrier or transportation of the product from one location to another, or alterations made by owner.

NEWTRAL 2 ERGONOMOMIC MOUSE

## USER'S MANUAL



HEALTHY WORKING